



1 Scanner Overview

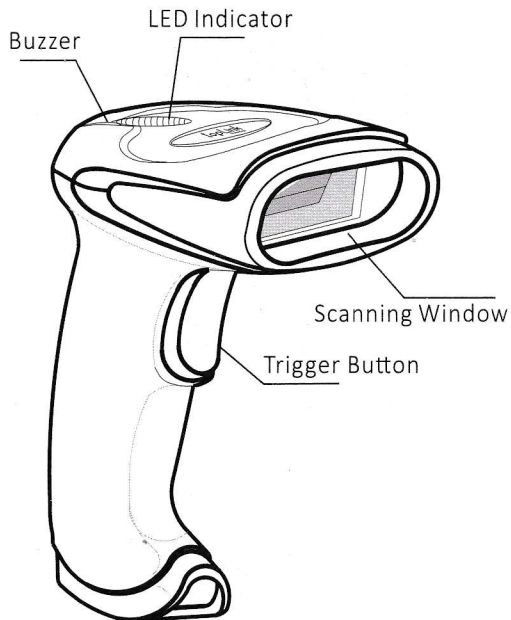


Barcode scanner

2 Cable plug&Unplug


(Pluggable scanner applies)

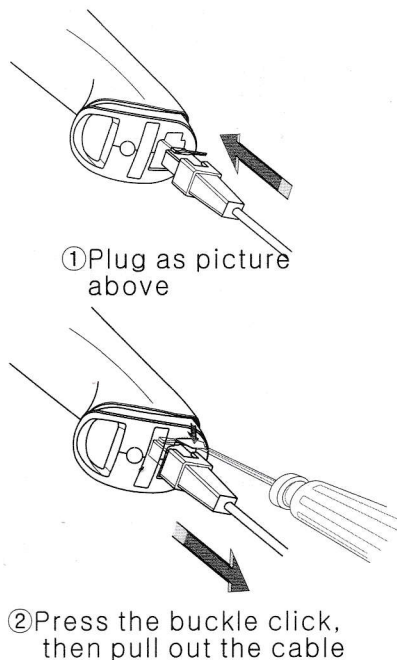

4 Scanning Angle

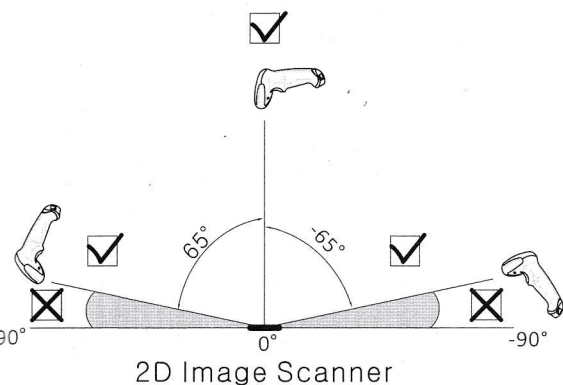

5 Methods

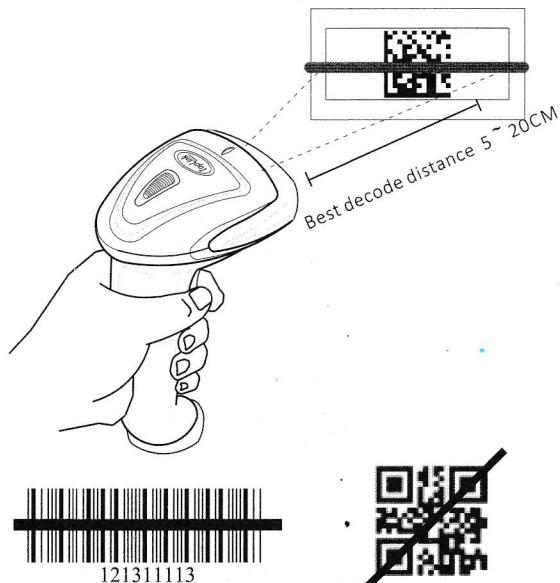

The aiming beam should be centered over the bar code, but it can be positioned in any direction for a good read.

Decode Settings

① Defaults Parameter

- 1、Restore default parameter will not change interface Mode.
- 2、With “*” in bold means default parameter.



Restore Defaults

② Interface Mode



USB HID Keyboard



Serial Output



USB VCOM

⑤ Suffix Values



*Add 0x0D (CR)



Don't Add 0x0D(CR)



*Add 0x0D 0x0A (CR LF)



Don't Add 0x0D 0x0A(CR LF)

⑥ Barcode Switch



*1D Barcode ON



1D Barcode OFF



*2D Barcode ON



2D Barcode OFF

③ Trigger Mode



*Single Read

Set Auto Trigger, pls scan



④ Auto Trigger Same Code Delay



750ms



1000ms



1500ms

⑦ UPC Setting



Enable UPC-E convert to UPC-A



*Disable UPC-E convert to UPC-A



Enable UPC-A convert to EAN-13



*Disable UPC-A convert to EAN-13

⑧ URL Barcode



*URL Barcode ON



URL Barcode OFF