

↑topLink
Technology

2D Barcode SCANNER


TL-OM10

Quick Start Guide


Contents:

- Barcode Scanner
- Quick Start Guide

Adjustable Angle

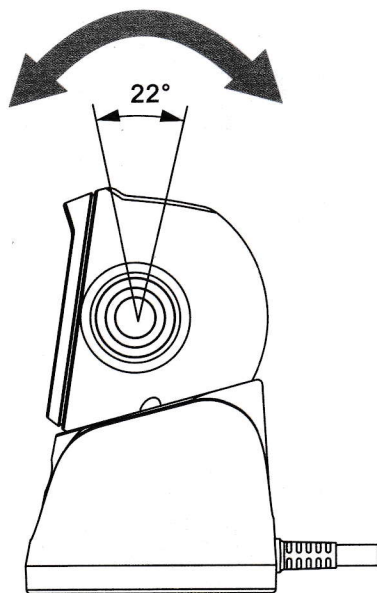


Scanner Overview

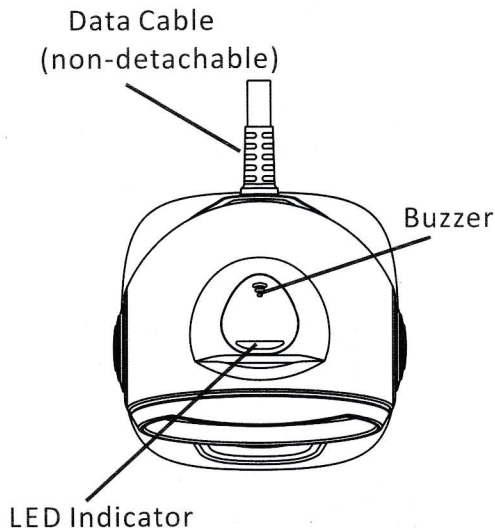


Note: Product appearance depends on goods.

Methods

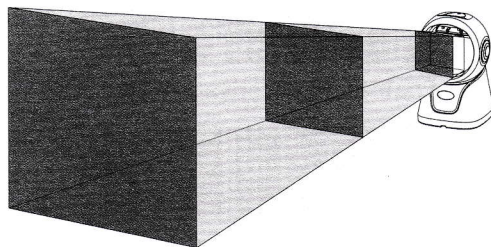

Scanning methods:

1. Make sure all connection lines are securely connected
2. Move the bar code toward the scan window.
3. Display the bar code anywhere within the effective area of the scanner.
4. After the decoding is successful, the scanner will sing once and the LED will flash once.

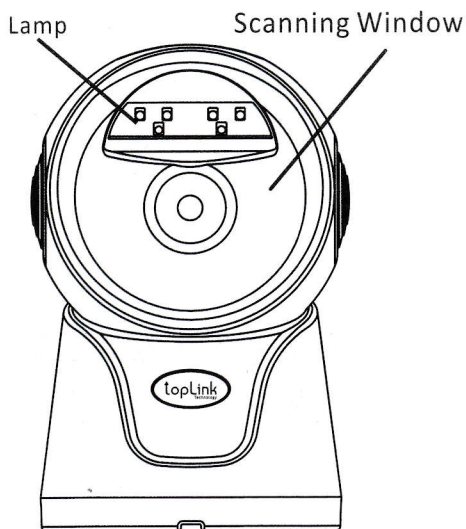

Note: Product appearance depends on goods.

Lights Indicator

LED Indicator

Explanation

Blue light blinking Decoding Successfully

Buzzer

Beep Indication

Explanation

One Beep Decoding Successfully

Three Beep Power on

Maintenance

* The reading window must be kept clean and free from warranty liability for damage caused by improper maintenance.

* Avoid hard and rough objects to wear or scratch the reading window.

* Do not scan the bar code of the manual at will, otherwise the scanner may not be able to scan.

* Please use a soft cloth to clean the window. Examples include glasses cleaning cloth and lens cleaning cloth.

Problems and Solutions

Problem	Possible Solutions
Don't work.	Disconnect the power adapter and reconnect.
Bar code is decoded, but not transmitted to the host.	Check the parameters(Waves)of the scanner and application.
Unable to decode bar code.	1. Please refer to this book if the code reading method is wrong. Correct code reading in the manual. 2. Whether the bar code is set to be readable. 3. Whether the bar code is damaged, if the bar code is damaged Worse than the scanner itself Reading ability, barcode will not be recognized to read.

Factory Default

Scan the "Factory Default Setting" bar code below to reset the scanning gun to factory default Setting.



Restore Defaults

USB Connection



USB HID Keyboard



USB VCOM

Keyboard Layouts

Configuration method: Scan the function bar code directly.



*US



French



Italian



German



Spanish



Russia



Turkish-Q



Turkish-F

Decodina Tone



Low



Middle



*High



Turn Off

One-dimensional code



*Open all one-dimensional codes



*Close all one-dimensional codes

Two-dimensional code



*Open all two-dimensional codes



Close all two-dimensional codes

UPC Setting

Configuration method: Scan the function bar code directly.



Enable UPC-E convert to UPC-A



*Disable UPC-E convert to UPC-A



Enable UPC-A convert to EAN-13



*Disable UPC-A convert to EAN-13

URL Code

Configuration method: Scan the function bar code directly.



Enable URL QR code



*Disable URL QR code